

Terminal to Update Firmware for the Microguard


Power up the Microguard. You have 1/2 second to hit <SPACE BAR> to bring up the HUB firmware menu

(1) Plug USB into Microguard first, then select the COM port that wasn't there before

(2) Initial settings

Microguard firmware menu appears here

(3) Hit the Connect button

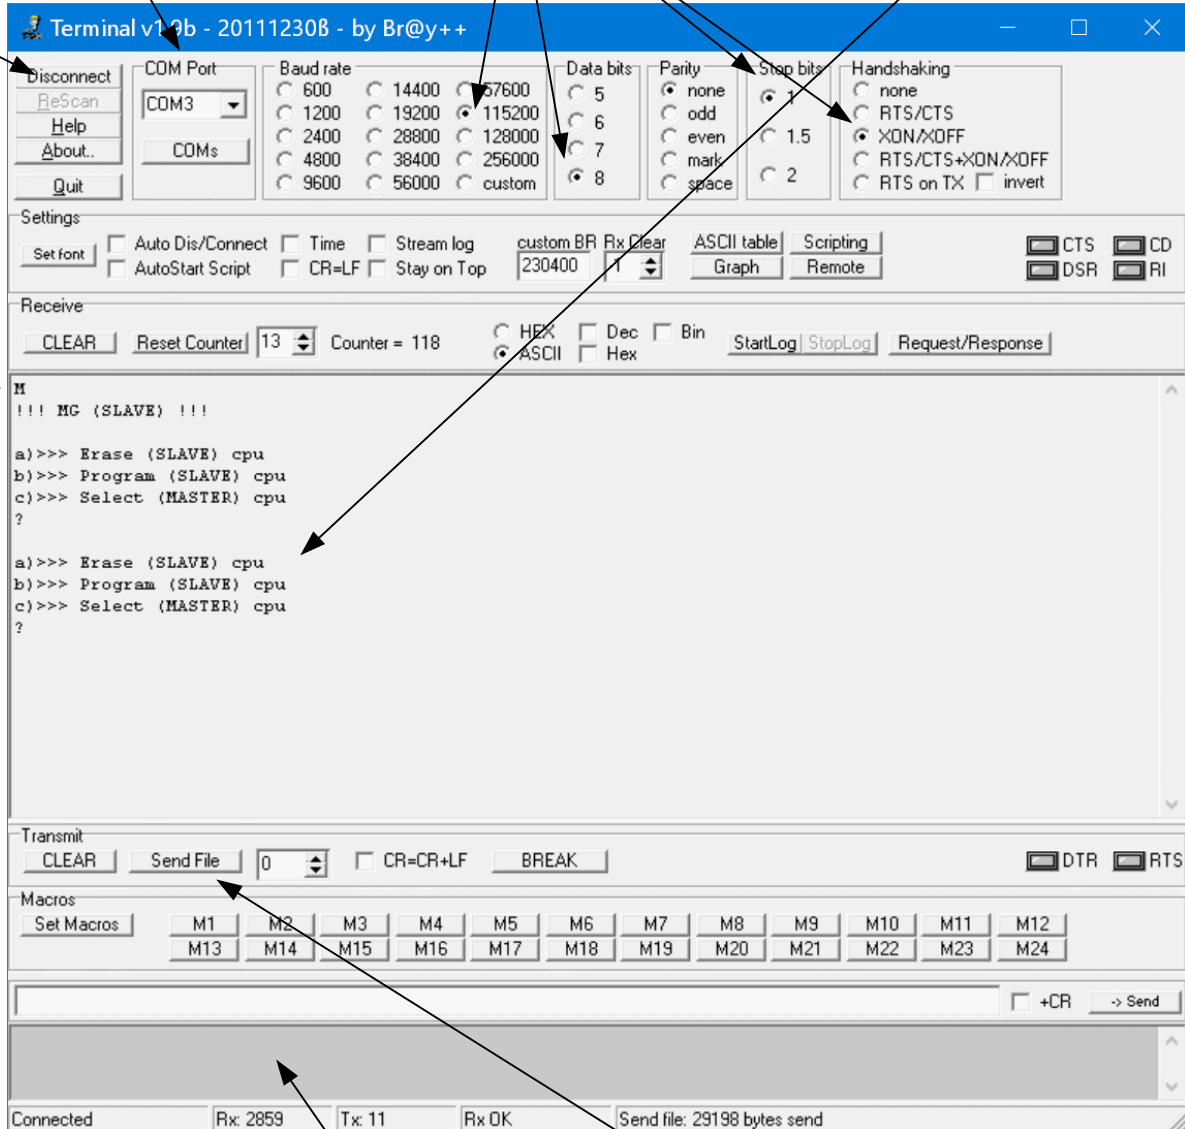

You will need to tell the Factory what letter or number this is before they will Email you any Software updates.

What you type goes here

Click to send .S19 files to Microguard